


# NB-PCP INSTRUCTIONS

## PARTS LIST FOR NB-PCP & NB-PCP-W

- (1) 4" x 4" Anti-Vibration Gasket
- (1) 8.32 x3 /8" Truss Head Screw
- (4) 1/4" x 2" Lag Bolts

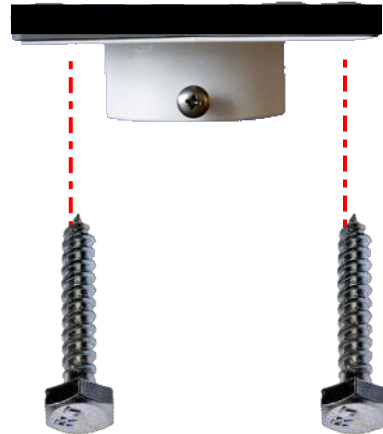

Remove plastic backing off Anti-Vibration Gasket.

Position on ceiling and mark the ceiling where you want your anchors to go.

Pre drill your holes. Insert your anchors in the ceiling.

Place the NB-PCP on the ceiling with the gasket first

Bolt or screw in the included hardware

Designed and Manufactured in the USA by

Nigel B Design, Inc. CA USA. Tel: (818) 487-9323 Fax: (818) 766-9805  
Web Site: [www.nigelbdesign.com](http://www.nigelbdesign.com) E-Mail: [sales@nigelbdesign.com](mailto:sales@nigelbdesign.com)